

CONTENTS

FOREWORD AND GENERAL DESCRIPTION.....	3
NOTES.....	4
CONTENTS	5
NOTES.....	12
GENERAL DATA	13
SUMMARY OF SPECIAL ITEMS OF	15
MAINTENANCE AND PERIODIC OIL CHANGES.....	15
<i>Engine</i>	15
<i>Clutch</i>	15
<i>Steering</i>	15
<i>Brakes</i>	15
<i>Radiator</i>	15
<i>Road Springs</i>	15
<i>Engine sump</i>	15
<i>Air silencer</i>	15
<i>Oil filter gauze</i>	15
<i>Gearbox and rear axle</i>	15
<i>Front hubs</i>	15
<i>Steering box</i>	16
CHAPTER 1 ENGINE.....	17
DESCRIPTION	17
<i>Engine removal</i>	17
<i>Removal of cylinder head</i>	18
<i>Inspection of cylinder head</i>	18
<i>Refit cylinder head</i>	18
<i>Removal of valves</i>	18
<i>Inspect and refit valves</i>	19
<i>Adjusting the tappets</i>	20
<i>Remove the engine sump</i>	20
<i>Refit the engine sump</i>	20
<i>Remove the camshaft</i>	21
<i>Refit the camshaft, timing chain and sprockets</i>	21
<i>Remove the crankshaft</i>	21
<i>Remove the pistons</i>	21
<i>Refit the pistons</i>	22
<i>Refit the crankshaft</i>	22
<i>Remove the oil pump</i>	22
<i>To check the oil pump</i>	22
<i>Refit the oil pump</i>	22
CHAPTER 2 GEARBOX.....	25
DESCRIPTION	25
<i>To remove gearbox</i>	25
<i>To dismantle/assemble the gearbox</i>	25

MORRIS EIGHT WORKSHOP MANUAL

COMMON SYNCHROMESH GEARBOX TROUBLES.....	27
<i>Jumping out of top gear</i>	27
<i>Sticking in top gear</i>	27
<i>Jumping out of second gear</i>	27
<i>Sticking in first, second or reverse gear</i>	27
<i>Jumping out of first gear</i>	27
<i>Jumping out of reverse gear</i>	27
<i>Failure of gears to synchronise</i>	27
NOTES	28
CHAPTER 3 CLUTCH.....	29
DESCRIPTION	29
<i>Remove clutch and flywheel</i>	29
<i>Inspect the clutch and flywheel</i>	30
<i>Refit the clutch and flywheel</i>	30
CLUTCH FAULTS AND REMEDIES.....	32
TICK OR KNOCK	32
(A) HUB SPLINES BADLY WORN DUE TO MISALIGNMENT.....	32
CHECK/CORRECT ALIGNMENT.....	32
CHAPTER 4 COOLING AND EXHAUST SYSTEMS.....	33
THE COOLING SYSTEM	33
THE EXHAUST SYSTEM.....	33
NOTES	34
CHAPTER 5 FUEL SYSTEM.....	35
DESCRIPTION	35
FUEL FILTERS.....	35
FUEL PUMP	35
<i>Pump action</i>	36
<i>Valves to remove and refit (see Fig. 17)</i>	37
<i>Gap – to test and correct (see Fig. 18)</i>	37
<i>Pump to dismantle</i>	37
<i>Contact set and end plate moulding – to remove</i>	38
<i>Contact set and end plate moulding – to refit</i>	38
<i>Diaphragm and spindle assembly – to remove</i>	38
<i>Diaphragm and spindle assembly – to refit</i>	38
<i>Magnet assembly and body to assemble</i>	39
<i>To Test Pump</i>	41
<i>Carburettor</i>	41
<i>Fault diagnosis</i>	42
<i>Centring the jet</i>	42
<i>Cleaning</i>	43
<i>Needle</i>	43
<i>Float chamber fuel level</i>	43
<i>Adjustments</i>	45
<i>Fuel tank</i>	46
<i>To remove the fuel tank</i>	46
<i>Fuel Quantity indicating system</i>	46
NOTES	48
CHAPTER 6 IGNITION SYSTEM.....	49

DESCRIPTION	49
<i>The Coil</i>	49
<i>The Condenser</i>	49
<i>The Contact Breaker</i>	49
<i>The Distributor</i>	50
<i>Lubrication</i>	53
<i>Overhauling the distributor</i>	53
<i>Auto advance check</i>	54
NOTES.....	56
CHAPTER 7 ELECTRICAL EQUIPMENT.....	57
DESCRIPTION	57
<i>Generator</i>	58
<i>Dismantling the generator</i>	58
REGULATOR, CUT OUT AND FUSE UNIT	60
<i>Troubles with the unit, their location and remedy</i>	60
<i>Fuse troubles</i>	60
<i>Battery</i>	61
<i>Starter motor</i>	61
TROUBLES WITH STARTERS	62
<i>Headlamps</i>	63
<i>Side lights (Parking lights)</i>	65
<i>Tail light(s)</i>	65
<i>Trafficators</i>	66
<i>Dashlamp</i>	67
<i>Windscreen wipers</i>	67
<i>Horn</i>	69
<i>Ammeter</i>	69
<i>Ignition warning light</i>	69
<i>Combined lighting, charging and ignition switch</i>	69
<i>Stop light switch</i>	69
CHAPTER 8 STEERING GEAR.....	71
DESCRIPTION	71
<i>Removal of steering wheel</i>	71
<i>Removal of steering column and gearbox</i>	71
<i>Wheel alignment</i>	73
<i>Steering faults</i>	74
CHAPTER 9 FRONT AXLE	75
DESCRIPTION	75
<i>Brake back plate to remove and reassemble</i>	75
<i>Front axle to remove</i>	75
<i>Dismantle front axle</i>	75
NOTES.....	76
CHAPTER 10 REAR AXLE.....	77
DESCRIPTION	77
LUBRICATION.....	80
MAINTENANCE.....	80
<i>Remove Hub and Brake Drum</i>	80

MORRIS EIGHT WORKSHOP MANUAL

<i>To remove/install differential housing</i>	80
<i>To dismantle/assemble differential</i>	80
<i>Remove the rear axle</i>	82
CHAPTER 11 ROAD SPRINGS AND SHOCK ABSORBERS.....	83
FRONT SPRINGS.....	83
REAR SPRINGS.....	83
SHOCK ABSORBERS.....	83
CHAPTER 12 PROPELLER SHAFT.....	85
DESCRIPTION.....	85
MAINTENANCE.....	85
<i>To remove and reinstall propeller shaft</i>	85
<i>To dismantle and reassemble propeller shaft</i>	86
CHAPTER 13 BRAKING SYSTEM.....	89
DESCRIPTION.....	89
<i>Master cylinder to remove and install</i>	89
<i>Dismantle master cylinder</i>	89
<i>Reassemble master cylinder</i>	89
WHEEL CYLINDERS.....	89
<i>Wheel cylinder to remove and install</i>	90
<i>To dismantle and reassemble wheel cylinder</i>	90
BRAKE SHOES.....	90
<i>To remove and reinstall brake shoes</i>	91
<i>To remove and install flexible hoses</i>	91
<i>Bleeding the system</i>	91
THE HAND BRAKE MECHANISM.....	92
<i>To remove and install hand brake cables</i>	92
<i>Removal and reinstallation of hand brake lever</i>	93
BRAKE SYSTEM FAULTS.....	93
1. <i>Pedal travel excessive (Requires pumping)</i>	93
2. <i>Pedal feels spongy or springy</i>	93
3. <i>Brakes inefficient</i>	93
4. <i>Brakes drag</i>	93
5. <i>Brakes remain on</i>	93
6. <i>Unbalanced braking</i>	93
MAINTENANCE.....	93
<i>Flushing the system</i>	93
<i>Adjusting the brakes</i>	93
<i>Adjusting brake pedal</i>	94
CHAPTER 14 WHEELS AND TYRES.....	95
DESCRIPTION.....	95
<i>Tyre pressures</i>	95
<i>Removing and installing tyres</i>	95
CHAPTER 15 BODY.....	97
DESCRIPTION.....	97
<i>Removal of front guards</i>	97
<i>Removal of inner front guards</i>	97
<i>Removal of rear mudguards</i>	97

<i>Removal of rear inner guards</i>	97
<i>Removal of doors</i>	97
<i>Correct procedure for hanging doors</i>	99
<i>Removal of door windows</i>	99
<i>Removal of rear windows and fixed side windows</i>	99
<i>Removal/refitting of windscreen glass</i>	99
<i>Removal of bonnet</i>	99
<i>Removal of running boards</i>	100
<i>Sliding Roof</i>	100
<i>Fixed head or roof insert panel</i>	101
NOTES.....	102
SOURCES OF MORRIS 8 SPARES	103
MAJOR SUPPLIERS	103
OTHER SUPPLIERS	103
SPECIALIST SUPPLIERS	103
LINKS TO WEB SITES WHERE USEFUL INFORMATION MAY BE AVAILABLE	104
BIBLIOGRAPHY	104